




TELUS Optik TV[®]

Self-Install Kit: Set-up Guide


Table of Contents

Before you get started	Page 1
Step 1: Setting up your wireless digital box.....	Page 2
Step 2: Pairing with your Actiontec T3200M or wireless access point	Page 3
Step 3: Setting up your Optik TV remote.....	Page 4

What you'll find in your kit:

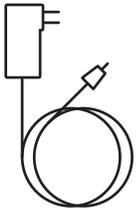

1x Power supply

 

1x Wireless digital box



1x Optik TV remote



2x AAA batteries



1x HDMI cable

Additional support:

If you need help during installation, TELUS technical support representatives are available 24/7.

Please call **310-MYTV (6988)** for assistance or visit [telus.com/selfinstall](https://www.telus.com/selfinstall) for additional information.




We are continually listening to our customers to make your experience better every day. Amazing service, it's what sets us apart.

Before you get started

Confirm your TV has an available HDMI input:

Your kit includes an HDMI cable to connect your wireless digital box to an HDMI input on your TV (typically found on the back of the TV). If your TV doesn't have an available HDMI input, you'll need to use Component Audio and Video cables instead (not included).

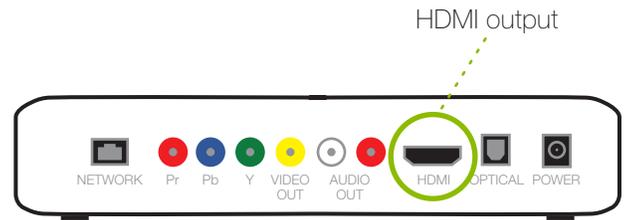

Identify your TELUS gateway/modem:

You will already have a gateway/modem installed in your home. This would have been set up when you first received TELUS Internet. To determine the model of your gateway/modem, check the sticker on the device. If you have a T3200M, you will need to pair your wireless digital box with your gateway/modem in Step 2. If you do not have this model, you will need to identify your wireless access point (details below).



Actiontec T3200M

Identify your wireless access point (if applicable):

If you do not have an Actiontec T3200M, you will have a wireless access point installed in your home. Locate this piece of equipment and ensure that it is connected to your gateway/modem.


For a detailed visual reference of the equipment, please visit [telus.com/selfinstall](https://www.telus.com/selfinstall)




Wireless access point

Step 1: Setting up your wireless digital box


- 1 Connect the power supply for the wireless digital box to an available power outlet near your TV. Wait until the POWER light on the front of the wireless digital box turns solid green.

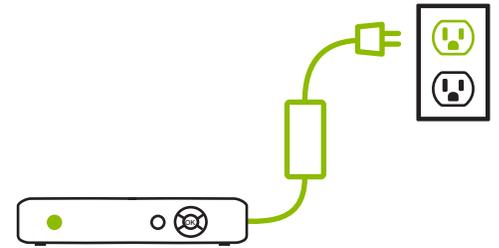


- 2 Using the HDMI cable included in your kit, connect the wireless digital box to any available HDMI input on your TV. If your TV doesn't have an available HDMI input, you'll need to use Component Audio and Video cables (not included). Make note of the HDMI or Component input that you plugged your cable into (i.e. HDMI 1). This will be needed for the next step.

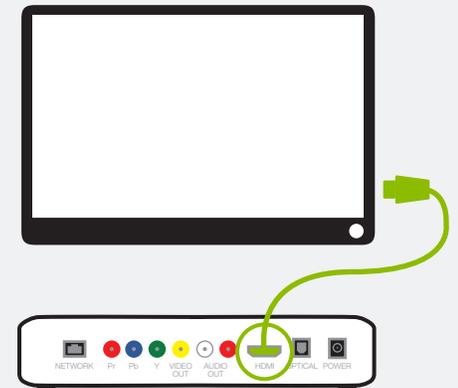

- 3 Using your TV manufacturer's remote, turn on your TV and select the appropriate input using the input or source button on your remote. The input selected should match the input that you plugged your HDMI cable into for the previous step.

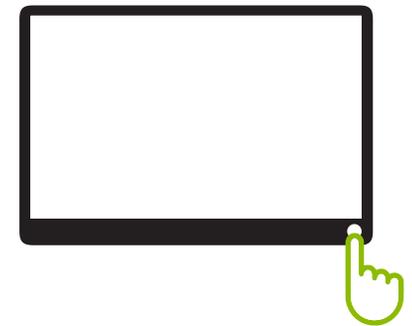


- 4 While the wireless digital box initializes, insert the 2 AAA batteries included in your kit into your Optik TV remote.

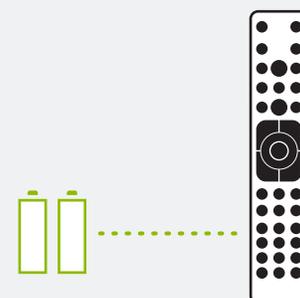


Step 2: Pairing with your Actiontec T3200M or wireless access point

- 1 Press the OK button on the front of your wireless digital box.

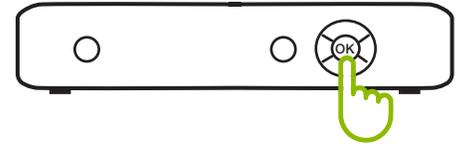

- 2 If you have an Actiontec T3200M (as identified at the beginning of the instructions) press the button on the front of the device for at least 5 seconds. If you have a wireless access point instead, simply press the WPS button on the front of your wireless access point.

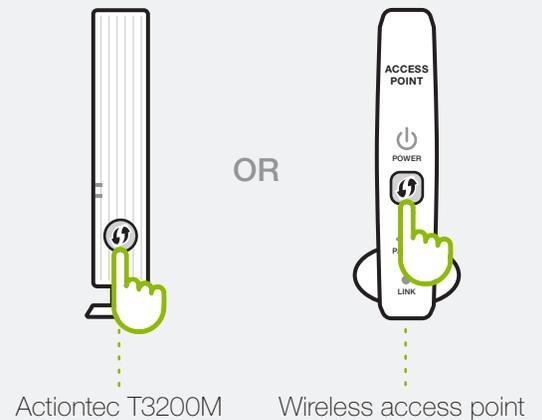

- 3 Your wireless digital box will automatically restart to complete registration. This will take approximately 5 minutes, but may take longer if updates are required.



- 4 Installation is now complete. The next step is to set up your Optik TV remote.

- 4 **Note:** If the set-up is unsuccessful, an error screen will appear prompting for a manual restart. Refer back to your order confirmation email for your Optik TV Self-Install Kit. It will include an 11-digit activation code, which is only required if your set-up is unsuccessful.



Step 3: Setting up your Optik TV remote

Before getting started:

- Stand 6-8 feet away from the TV and ensure there is a clear line of sight between the remote and the digital box.
- Make sure the TV and digital box are on.

- 1 Turn on the device for which you would like to program the remote. This could be your TV or amplifier. The device that is not being programmed, should be turned off.
- 2 Set the volume of the digital box to 25 by using the remote volume button before you program your TV or amplifier.
- 3 Press and hold  for 3 seconds, until the green LED next to the OPTIK button on the remote control flashes twice.
- 4 From the lists below, enter the 4-digit code for the brand of your TV or amplifier. The LED light beside the TV button will flash twice in red when a TV code is entered, and twice in yellow when an amplifier code is entered.

Codes for TV Brand

Funai	0011
Insignia	0021
LG	0015
Panasonic	0013
Philips	0019
RCA	0020
Samsung	0018
Sanyo	0012
Sharp	0014
Sony	0017
Toshiba	0016
Vizio	0010
Other*	0029

Codes for Amplifier Brands

Aiwa	0070
Bose	0067
Denon	0063
Harman/ Kardon	0062
Hitachi	0071
LG	0065
Onkyo	0066
Phillips	0069
Pioneer	0068
Samsung	0064
Sanyo	0073
Sharp	0072
Sony	0060
Yamaha	0061
Other*	0079

- 5 Press and hold  until your TV or amplifier switches off.
- 6 As soon as your TV or amplifier switches off, remove your finger from  and press  to confirm – the red TV light will flash twice.
- 7 Now press  again to switch your TV or amplifier back on.

Quick tip:

To have your digital box and TV come on with 1 button press, follow the steps below.

- Press and hold  for 3 seconds, until the green LED on the remote control flashes twice.
- Enter code **0 0 0 7** – green LED flashes twice.

 will then turn on both your digital box and TV: (and amplifier if programmed).

To turn power sync off. Enter code **0 0 0 6** and the green LED will flash twice.

