



Programming instructions for your TV and/or additional device

Before getting started:

- Stand 6-8 feet away from the TV and ensure there is a line of sight between the remote and the digital box
- Make sure the TV and digital box are on.
- Make sure the digital box volume is set to 25 by using the remote volume button.

- 1 Turn on your TV or auxiliary device.
- 2 There are 3 lights on the remote green for OPTIK, red for TV and yellow for AUX.
Press  until the device of your choice is illuminated on your remote.
Use TV to program the remote for your TV set or AUX for all other devices.
- 3 Press and hold  until the red TV or yellow AUX light flashes twice.
- 4 From the lists below, enter the code for your device brand and the TV or AUX light will flash twice.
Entering the code for "Other" will search for all other brands and may take up to 15 minutes.

Codes for TV Brand

Funai	11
Insignia	21
LG	15
Panasonic	13
Philips	19
RCA	20
Samsung	18
Sanyo	12
Sharp	14
Sony	17
Toshiba	16
Vizio	10
Other*	29

Codes for DVD and Blu-Ray Brands





Funai	31
Hitachi	33
JVC	38
Kenwood	36
LG	37
Onkyo	34
Panasonic	41
Pioneer	40
Samsung	43
Sanyo	32
Sharp	35
Sony	42
Toshiba	39
Vizio	30
Other*	44

Codes for Amplifier Brands

Aiwa	70
Bose	67
Denon	63
Harman/ Kardon	62
Hitachi	71
LG	65
Onkyo	66
Phillips	69
Pioneer	68
Samsung	64
Sanyo	73
Sharp	72
Sony	60
Yamaha	61
Other*	79

To change your TV input source, press  while in TV mode.



Tap to go back. Press and hold to exit.

- 5 Press and hold  until your TV or auxiliary device turns off.
- 6 Press  and the red TV or yellow AUX light will flash twice.
- 7 Press  to switch your TV or auxiliary device back on.
- 8 Press  until the green OPTIK light is on. Once in OPTIK mode, you can control your Optik TV digital box as well as your TV and/or auxiliary device simultaneously.

You're done! To program another device repeat the above steps.

Did these instructions not work for you? Go to telus.com/optikremote for troubleshooting steps.

Quick tip:

To change the input selection on your TV, first check that your remote is in TV mode by pressing  until the light flashes red beside TV. Press  to change your input to select (ex HDMI1, HDMI2 etc).

Mode & Power Buttons

