

Programming devices to Optik TV™

Programming your TV

Remote Control

Before you start to program your remote control, make sure your TV is switched on.


- 1 Tap the **mode** button until the red TV light on your remote flashes, as shown in the picture on the right.
- 2 Press and hold the **mode** button for 3 seconds, until the TV light flashes twice.
- 3 Refer to the table on the right. Enter the code for your TV brand.
The light will flash twice.
*Selecting "Other" will search for all other TV brands and may take up to 15 minutes to generate codes.
- 4 Press and hold the **mode** button. When your TV switches off, remove your finger from the **mode** button.
- 5 Press **ok**. The red TV light will flash twice.
- 6 Press the **mode** button again to switch your TV back on.
- 7 Tap the **mode** button until the green OPTIK light is illuminated at the top of your remote.

That's all there is to it. Now, you can turn your TV and digital box on and off simultaneously by pressing the **mode** button on your remote.

DVD, BluRay and Audio Auxiliary Devices

To learn how to program your remote to control these devices, please visit telus.com/programtvdevices.

Quick tips

- 1 Back/Exit:  a. Tap to go back. b. Press and hold to exit.
- 2 If you're using Xbox 360® as a set top box, your remote has been pre-programmed to control it. To control your Xbox 360®, make sure you are in AUX mode.

Congratulations – you're done!

Troubleshooting: If the programming does not work properly, please refer to the FAQ's at telus.com/remotefaq.

