


# Programming instructions for your TV

## Before getting started:

- Stand 6-8 feet away from the TV and ensure there is a line of sight between the remote and the digital box.
  - Make sure the TV and digital box are on.
- 1 Turn on the device that you would like to program the remote for. This could be your TV or an amplifier.
  - 2 Set the volume of the digital box to 25 by using the remote volume button before you program a TV or amplifier.
  - 3 Press and hold  for 3 seconds, until the green LED next to the OPTIK button on the remote control flashes twice.
  - 4 From the lists below, enter the 4-digit code for the brand of your TV or amplifier. The LED light beside the TV button will flash twice in red when a TV code is entered; and will flash twice in yellow when an amplifier code is entered.





### Codes for TV Brand

Funai	0011
Insignia	0021
LG	0015
Panasonic	0013
Philips	0019
RCA	0020
Samsung	0018
Sanyo	0012
Sharp	0014
Sony	0017
Toshiba	0016
Vizio	0010
Other*	0029

### Codes for Amplifier Brands


Aiwa	0070
Bose	0067
Denon	0063
Harman/ Kardon	0062
Hitachi	0071
LG	0065
Onkyo	0066
Phillips	0069
Pioneer	0068
Samsung	0064
Sanyo	0073
Sharp	0072
Sony	0060
Yamaha	0061
Other*	0079

Tap to go back.  
Press and hold to exit.

- 5 Press and hold  until your TV or amplifier switches off.
- 6 As soon as your TV or amplifier switches off, remove your finger from  and press  to confirm – the red TV light will flash twice.
- 7 Now press  again to switch your TV or amplifier back on.

## Quick tip:

To have your digital box and TV come on with 1 button press, follow the steps below.

- Press and hold  for 3 seconds, until the green LED on the remote control flashes twice.
- Enter code **0 0 0 7** – green LED flashes twice.

 will then turn on both your digital box and TV: (and amplifier if programmed).

To turn power sync off. Enter code **0 0 0 6** and the green LED will flash twice.

