



# TELUS Optik TV<sup>®</sup>

 
## Self-Install Guide




# Table of Contents

Before you get started .....	Page 1
Step 1: Setting up your wireless digital box.....	Page 2
Step 2: Pairing with your wireless access point or T3200M modem.....	Page 3

## What you'll find in your kit:



1x Power supply

 

1x Wireless digital box



1x Optik TV remote



2x AAA batteries



1x HDMI cable

## Additional support:

If you need help during installation, TELUS technical support representatives are available 24/7.

Please call **310-MYTV (6988)** for assistance or visit [telus.com/selfinstall](https://www.telus.com/selfinstall) for additional information.




We are continually listening to our customers to make your experience better every day.  
Amazing service, it's what sets us apart.

# Before you get started

## Confirm your TV has an available HDMI input:

Your kit includes an HDMI cable to connect your wireless digital box to your TV. If your TV doesn't have an HDMI input, you can use component audio and visual cables instead. Visit [telus.com/selfinstall](https://telus.com/selfinstall) for details.

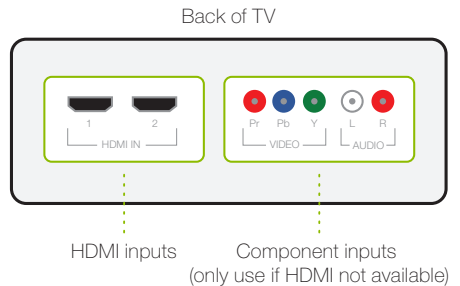


## Confirm whether you have a wireless access point or T3200M modem:

You will have either a wireless access point or a T3200M modem installed in your home. Confirm which of these two devices you have, this is the device you will pair with the wireless digital box.




# Step 1: Setting up your wireless digital box

- 1a Connect the power supply for the wireless digital box.

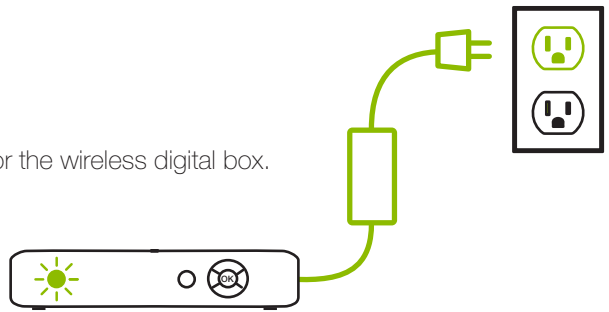

- 1b Using the HDMI cable included in your kit, connect the wireless digital box to any available HDMI input on your TV.

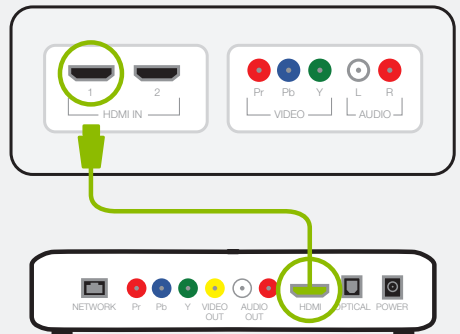

- 1c Using your TV manufacturer's remote, turn on your TV and use the input/source button to select the input used for the wireless digital box.



## Step 2: Pairing with your wireless access point or T3200M modem

2a

When the screen on the right appears, press the OK button on the wireless digital box. The power button will flash green.




Wireless digital box

When the screen on the right appears, press and hold the  button on the front of your wireless access point or T3200M modem for 10 seconds and let go.

The lights on the device will flash indicating that pairing is in progress.

2b


Hold for 10 seconds

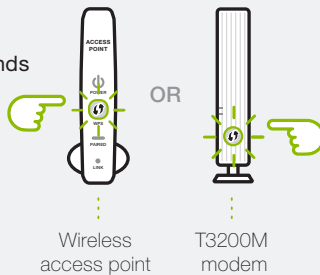

2c

A screen will appear indicating that pairing was successful (it may take a few minutes). You are now ready to watch TV.

For additional support and troubleshooting, visit [telus.com/selfinstall](https://telus.com/selfinstall).

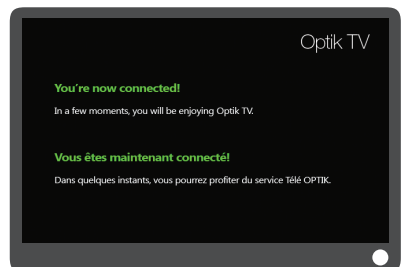

2d

Insert the batteries into the remote to control the wireless digital box. If you wish to pair this remote with your TV as well, please visit [telus.com/programremote](https://telus.com/programremote).

